

NOTICE

SLAP V3



**4 X 5MM
STANDOFF**



8 X WASHERS



**4 X M3/8MM
COUNTERSUNK**



8 X BLACK LOCKNUTS



**4 X M3/15MM
COUNTERSUNK**




**4 X M3/10MM
MUSHROOM**



**8 X M3/12MM
COUNTERSUNK**



**4 X M3/8MM
COUNTERSUNK**



**4 X 21MM
STANDOFF**




**4 X 28MM
STANDOFF**



A



8 X BLACK LOCKNUTS

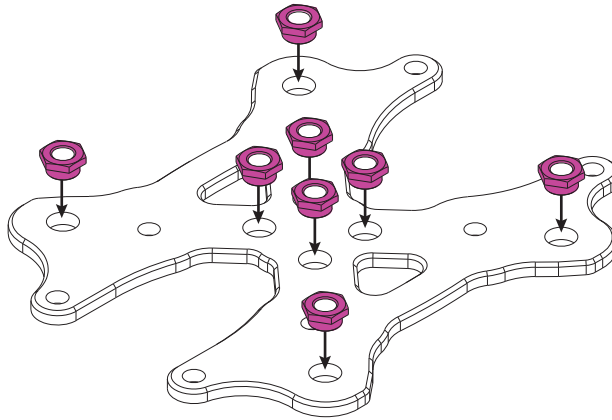

Take a big screw and insert the locknuts one by one.




B




8 X WASHERS




8 X M3/12MM
COUNTERSUNK

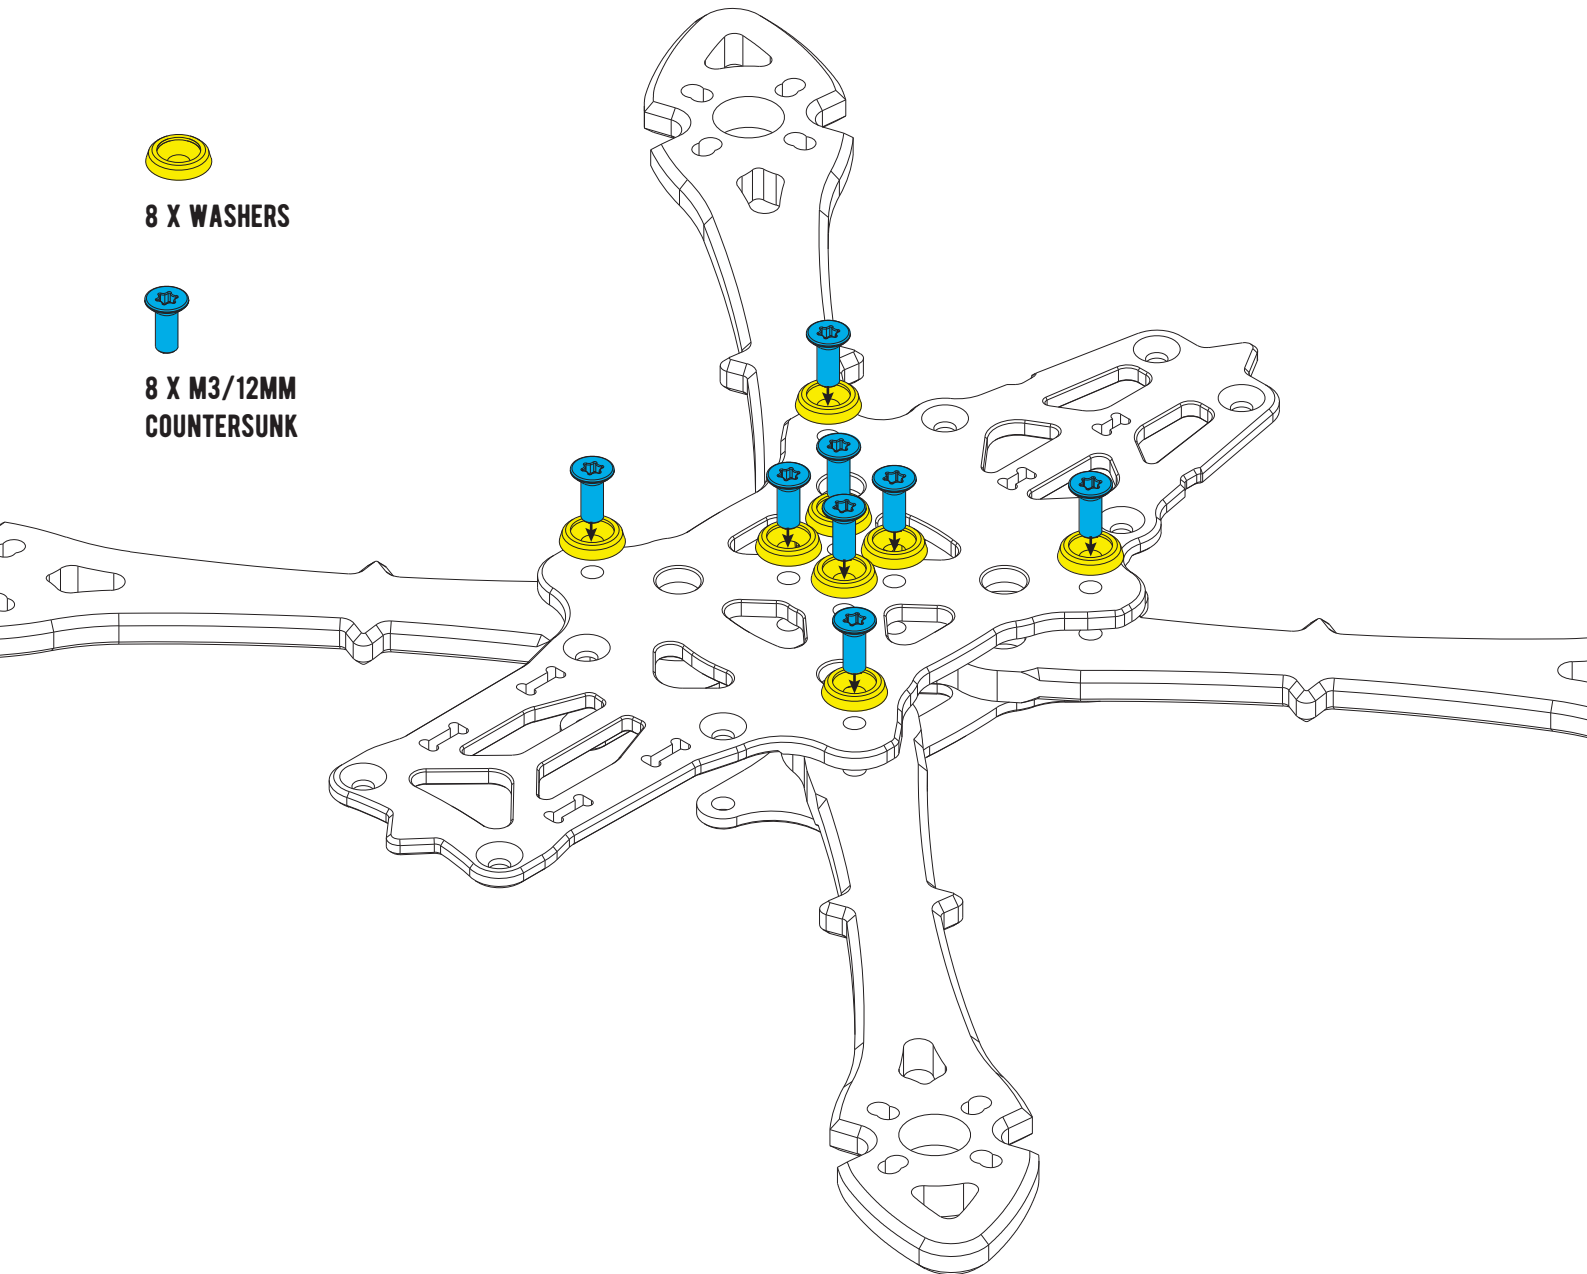

C

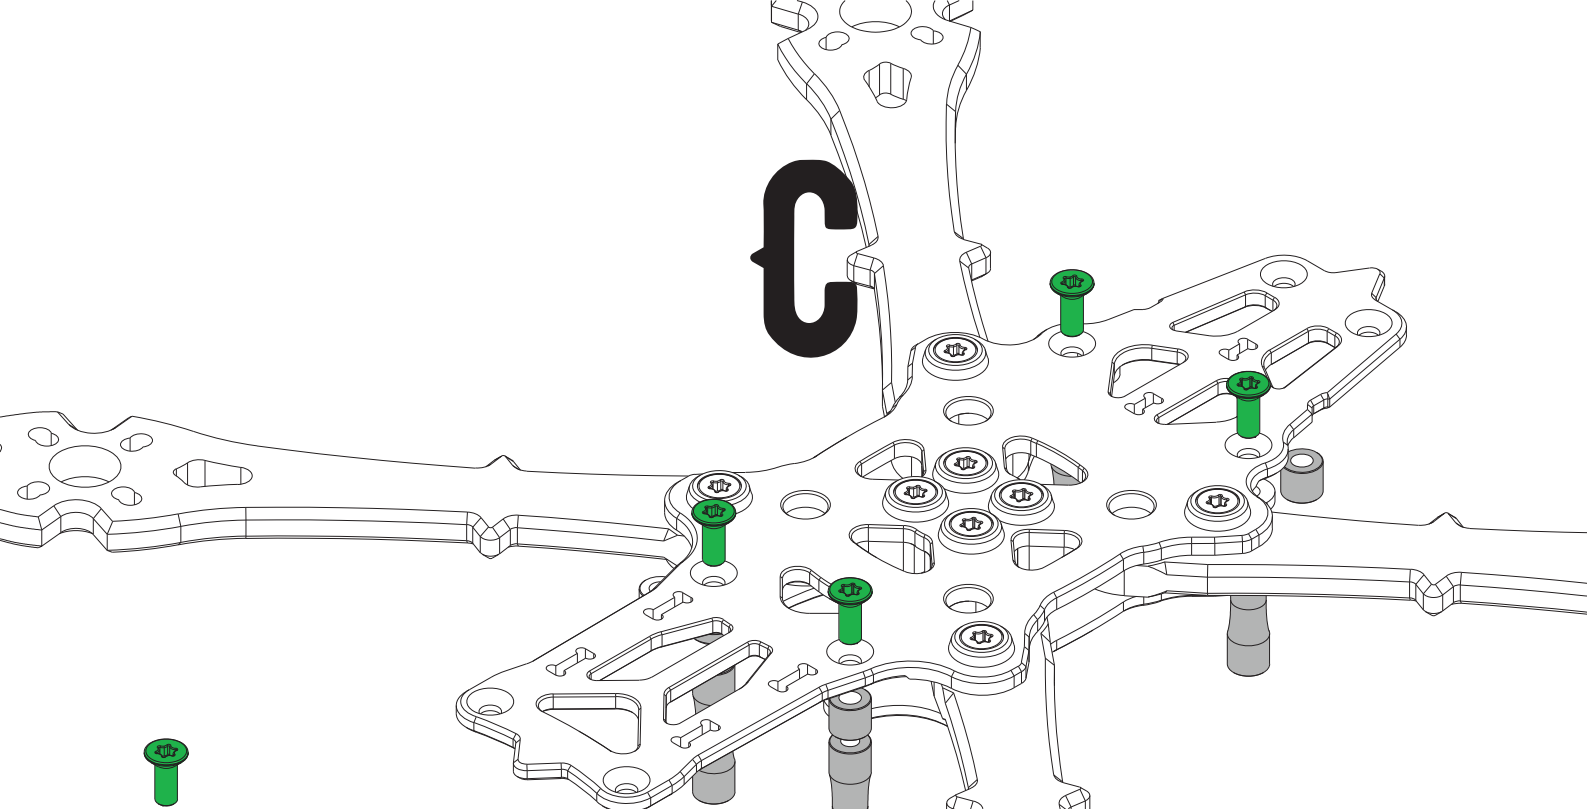


**4 X M3/15MM
COUNTERSUNK**



**4 X 21MM
STANDOFF**



**4 X 5MM
STANDOFF**

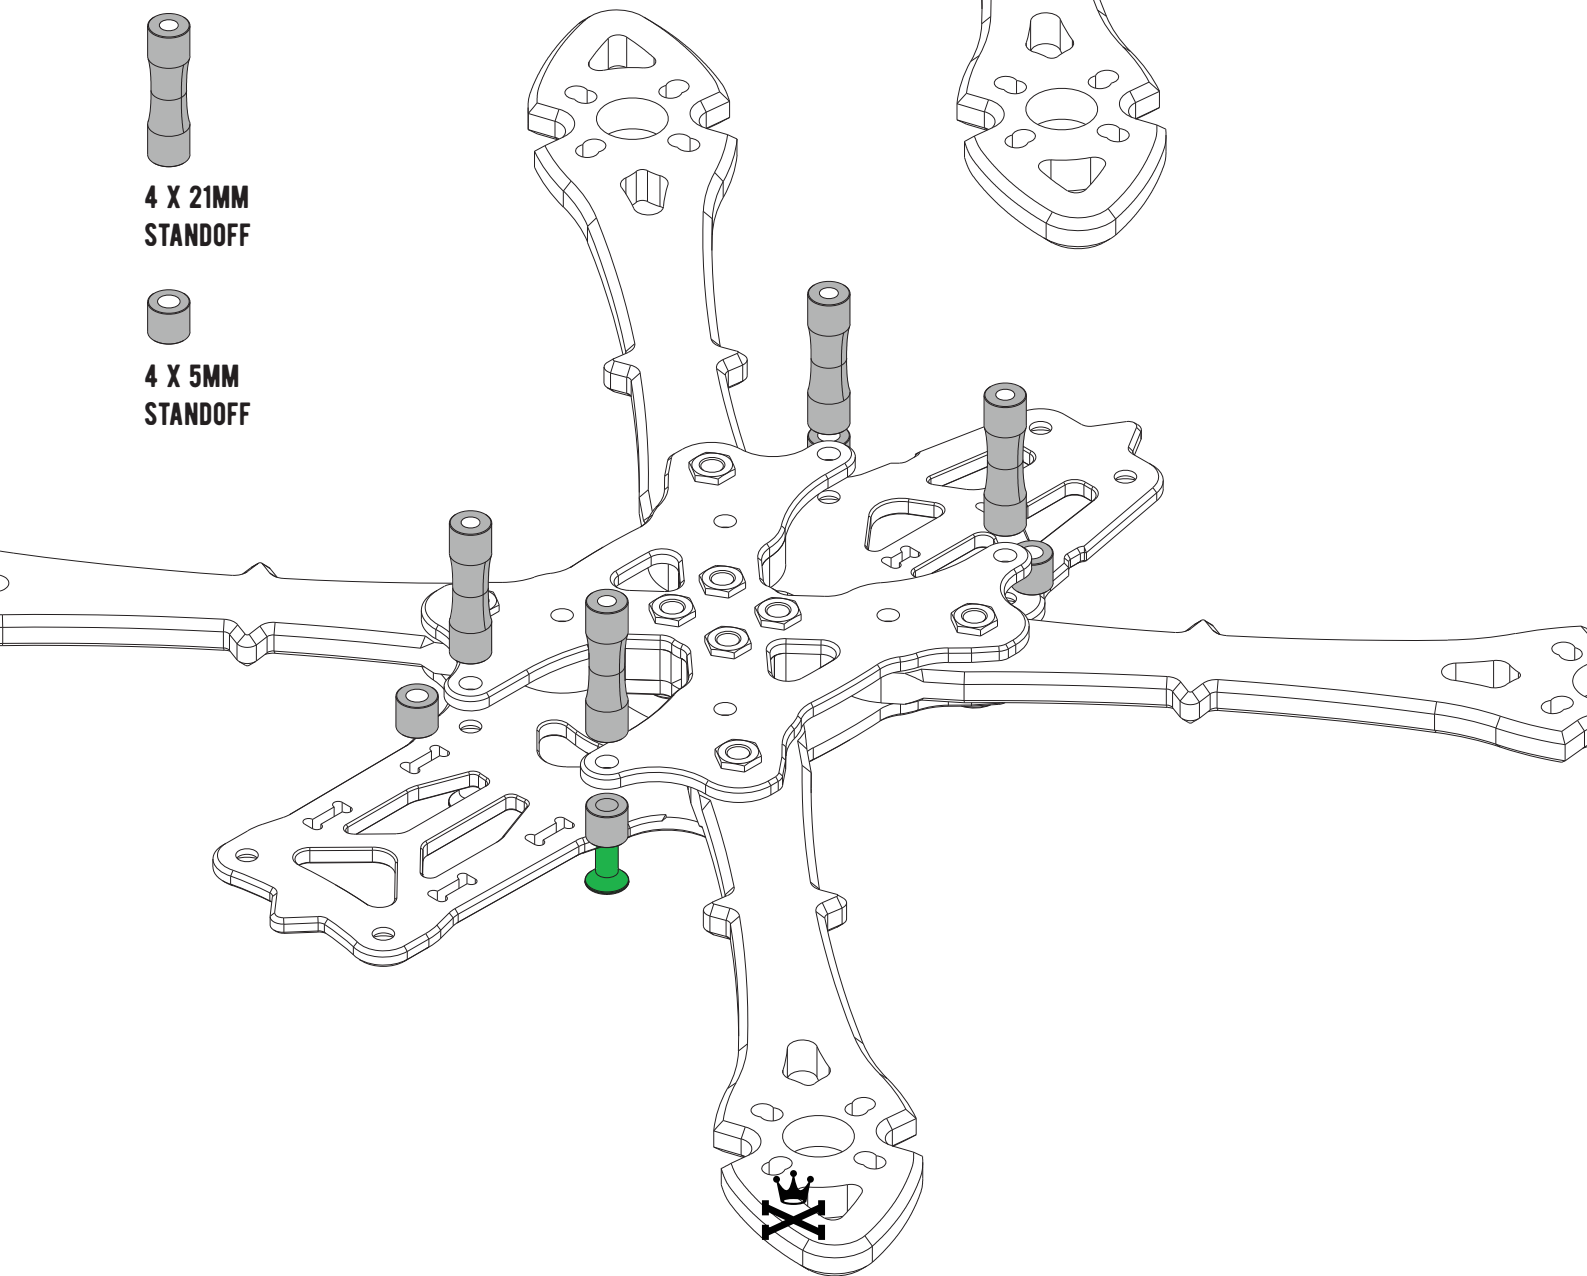

X

D



**4 X M3/8MM
COUNTERSUNK**



**4 X 28MM
STANDOFF**

X

E



4 X M3/10MM
MUSHROOM



4 X M3/8MM
COUNTERSUNK

